



AHT-10

AIR TUBE

GENERAL FEATURES

It ensures that air formed in the installations is collected and disposed easily from the top of branch. The sleeve at the top of air tube is for air relief. It is recommended to install quality air relief to this sleeve.

The sleeve at the bottom of air tube is necessary to connect air tube to installation. While the air tube is connecting to the installation, air relief must facing the top.


The air in the system and circulating in the system causes corrosion, serious failure, severe loss of efficiency and sound on installation.

Ayvaz Air Tube:

- Allows the air in the system to be evacuated.
- The system constantly discharges air while the system is running.
- Drain valve or air relief at the top air tube should be installed.

Body	: St 37 Carbon Steel
Diameter	: 1/2"
Max. Working Pressure	: 16 bar
Max. Working Temp.	: 100 °C
Connection	: Threaded

AHT-10 AIR TUBE

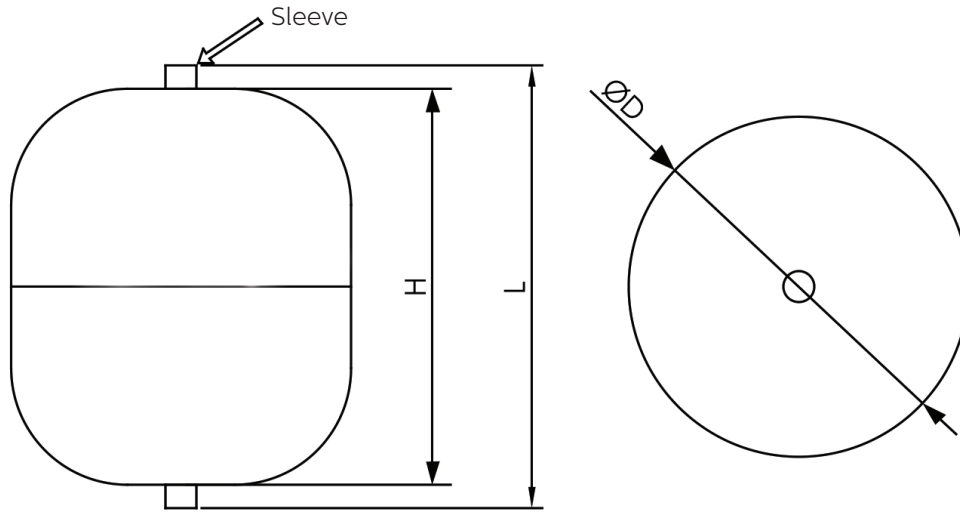

Capacity(Liter)	Dimensions				Wall Thickness	Sleeve Norm/DIN2986
	DN	ØD	H(mm)	L(mm)		
1,5	150	168	150	180	1,5	1/2"
3	150	168	200	230	1,5	1/2"
5	150	168	240	270	1,5	1/2"
7,5	150	219	200	230	1,5	1/2"
10	150	219	255	285	1,5	1/2"
15	150	219	390	420	3	1/2"
20	150	323	240	270	4	1/2"
30	150	323	360	390	4	1/2"
40	150	323	480	510	4	1/2"
50	150	323	540	570	4	1/2"

*There is ±5 tolerance in the dimensions

DRAIN CAPACITY												
ÇAP	0,5	1	2	3	4	5	6	7	8	9	10	BAR
1/2"	0,675	0,71	0,99	1,47	1,83	2,5	2,7	2,8	3	-	-	m ³ /h
3/4"	0,97	2,1	5,8	6,1	6,25	7	7,3	7,5	7,7	7,85	8	m ³ /h
1"	8	11,6	16	21,5	28	33	40	45	50	56	64	m ³ /h



HEAD OFFICE - FACTORY

Atatürk Sanayi Bölgesi Hadımköy Mahallesi Mustafa İnan Caddesi No: 44 Arnavutköy - İSTANBUL
Tel: +90 212 771 01 45 (pbx) | Fax: +90 212 771 47 27
info@ayvaz.com | www.ayvaz.com

Cona
Caserta/Italy
Tel: +39 0823 187 3988
rmolaro@ayvaz.com

Ayvaz Germany
Viernheim/Germany
Tel: +49 62046014399
germany@ayvaz.com

Ayvaz Ukraine
Kiev/Ukraine
Tel: +380 44 390 57 57
info@ayvaz.com.ua

Tricorr
Warsaw/Poland
Tel: +48 530 030 810
+48 533 603 335
tricorr@tricorr.eu

Ayvaz Azerbaijan
Baku/Azerbaijan
Tel: +99 (455) 579-84-32
ahayatov@ayvaz.com

Ayvaz Egypt
Cairo/Egypt
Tel: +20 122 819 78 29
andrew.eid@ayvaz.com

Ayvaz Gulf
Dubai/U.A.E
Tel: +971 563550822
+971 501306871
mideast@ayvaz.com

Ayvaz China
Ningbo/China
Tel: +86 152 5830 7361
msahin@ayvaz.com

Ayvaz Kazakhstan LLP
Almaty/Kazakhstan
Tel: +7 (727) 327 97 57
info_kz@ayvaz.com

Ayvaz N
İsperih/Bulgaria
Tel: +359 8431 27 32
office@ayvaz-n.eu

Ayvaz Serbia
Belgrade/Serbia
Tel: +381 61 658 70 52
yakbiyik@ayvaz.com

Ayvaz Vietnam
HCMC/Vietnam
Tel: +84 89 8508345

Ayvaz Americas
Rhode Island/USA
Tel: +1 401 737 8380
americas@ayvaz.com