

RUBBER EXPANSION JOINTS



Scan this QR Code



DESIGN

Bellow Material: Special Synthetic Rubber
Connection Types: Floating Flanged, Threaded

Operation Conditions

Nominal Diameter: DN 20 (3/4") - DN 80 (3") - DKK-10
DN32 (1 1/4") - DN600 (24") - LKA-10
Operating Temperature: -10°C/+90 °C
Operating Pressure: Max. to 10 bar - It depends on the nominal diameter and the operating temperature.

Advantages of rubber expansion joints


- Ayvaz rubber expansion joints provide excellent compensating features by their highly rated rubber bellows which is consisted of special synthetic rubber, steel wire and nylon braid fibre.
- They may be produced with flange and threaded connections.
- They may have two bellowed structure in order to absorb large movements.
- Ayvaz's Rubber expansion joints are designed to compensate axial, lateral, angular and transverse movements at the same time.

Application Areas

- Mechanical installation and machine engineering.
- Domestic water and liquid industry.
- Shipbuilding and marine engineering.
- Power plants and nuclear stations.
- HVAC applications.


Movement Absorption

- To compensate thermal expansion and compression.
- To reduce tension in the pipelines.
- To prevent noise and vibration to protect the connected systems.
- To compensate for ground, and settlement of especially the new buildings.
- To provide proper sealing with their elastic structures where the pipelines pass through walls.

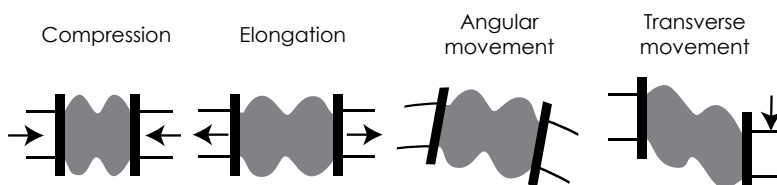

RUBBER EXPANSION JOINTS

Rubber Expansion Joint DKK-10

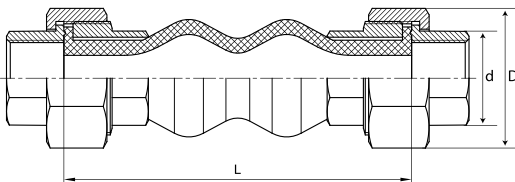


DN	Rc"	L	Axial Movement (mm)	Lateral Movement (mm)	Angular Movement (±°)	Code
DN15	1/2"	165	-22/+6	-22/+22	30°	708.150.100.010
DN20	3/4"	165	-22/+6	-22/+22	30°	708.150.100.020
DN25	1"	175	-22/+6	-22/+22	30°	708.150.100.030
DN32	1 1/4"	186	-22/+6	-22/+22	30°	708.150.100.040
DN40	1 1/2"	186	-22/+6	-22/+22	30°	708.150.100.050
DN50	2"	186	-22/+6	-22/+22	30°	708.150.100.060
DN65	2 1/2"	218	-22/+6	-22/+22	30°	708.150.100.070
DN80	3"	260	-22/+6	-22/+22	30°	708.150.100.080

*Special designed, rubber expansion joints with customized features are available on request.

** Subject to technical alterations and deviations resulting from the manufacturing process without giving any notification.

Rubber Expansion Joint LKA-10

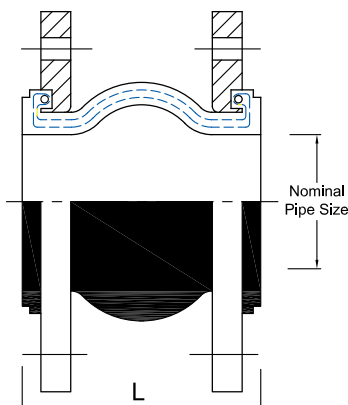



DN	L	Axial Movement (mm)	Lateral Movement (mm)	Angular Movement (±°)	Code
32	100	-10/+10	-10/+10	10°	708.150.220.010
40	100	-10/+10	-10/+10	10°	708.150.220.020
50	100	-10/+10	-10/+10	10°	708.150.220.030
65	100	-10/+10	-10/+10	10°	708.150.220.040
80	100	-10/+10	-12/+12	12°	708.150.220.050
100	100	-10/+10	-12/+12	12°	708.150.220.060
125	120	-10/+10	-12/+12	12°	708.150.220.070
150	120	-10/+10	-12/+12	12°	708.150.220.080
200	120	-10/+10	-12/+12	12°	708.150.220.090
250	120	-10/+10	-12/+12	12°	708.150.220.100
300	120	-10/+10	-12/+12	12°	708.150.220.110
350	266	-25/+16	-18/+18	15°	708.150.220.120
400	266	-20/+16	-18/+18	15°	708.150.220.130
450	200	-20/+12	-18/+18	15°	708.150.220.140
500	200	-20/+12	-18/+18	15°	708.150.220.150
600	250	-20/+12	-18/+18	15°	708.150.220.160

*Special designed, rubber expansion joints with customized features are available on request.





** Subject to technical alterations and deviations resulting from the manufacturing process without giving any notification.

INSTALLATION OF RUBBER EXPANSION JOINTS


1. Counter flange must not be bigger than the standard size or have an angled structure in order to protect rubber against cuts.

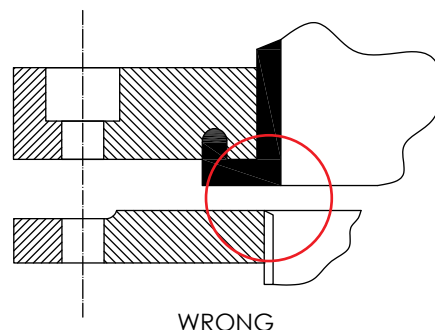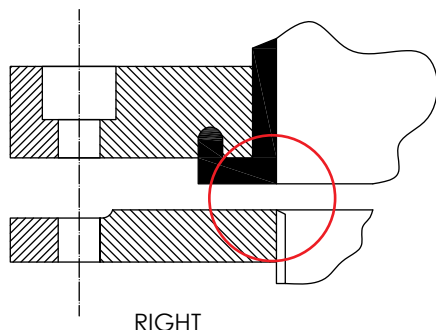

2. Sharp edged equipment should be prevented to be used during the installation, Bellow should be protected against heat and arc sparks of welding.

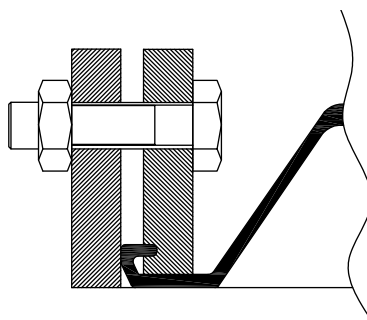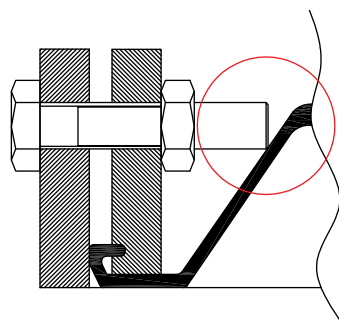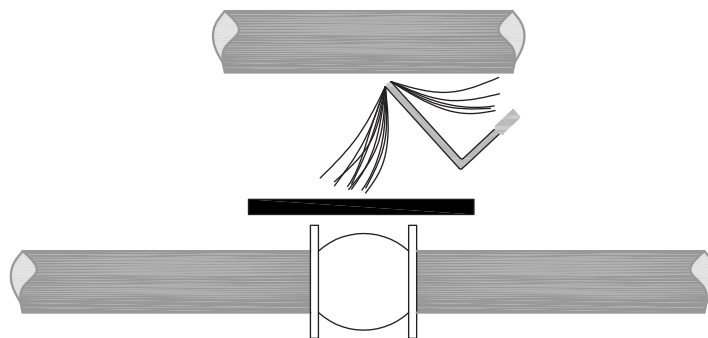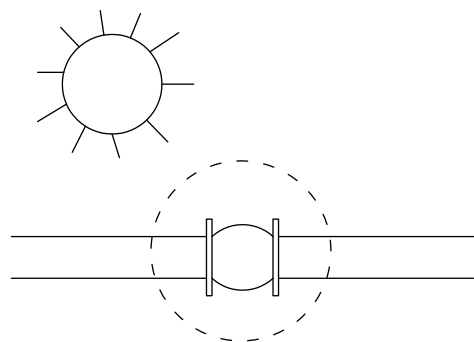

3. Bolts of the flanges should not be too long in order to prevent possible damages of friction during the operation.


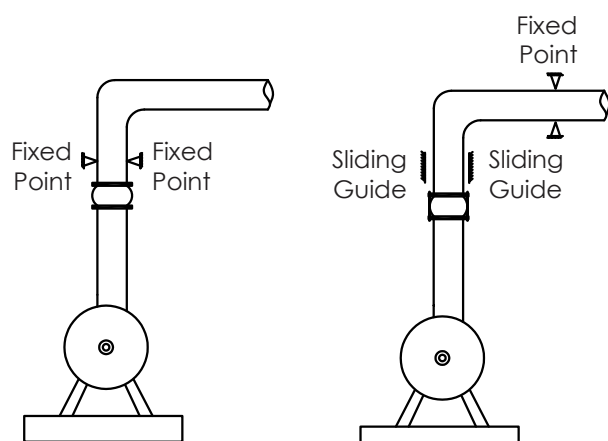


4. Sliding guides should be placed as not to cause additional loads to the expansion joint.

INSTALLATION OF RUBBER EXPANSION JOINTS


Rubber Expansion Joints Installation Manual

- 1) For the installation of the joints to the pump, refer to the right illustration and install. When the check valve is installed before the joints from the pump, there is a possibility of some trouble occurrence due to accumulation of fatigue by water head pressure and direct water hammer when the pump starts and stops.
- 2) Install the joints within allowable movements of elongation, compression, eccentricity, angular movement, etc.
- 3) When the joints are in displacement, note for the joints not to touch the structure and equipment (especially sharp edges) near the installation.
- 4) Take measurement and make centering correctly not to add unnecessary outer force (compression, tension, torsion, etc.) when connecting the joints to the pipes.
- 5) When welding or cutting the pipes nearby after installation, protect the joints with a cover (board or cloth) from sparks. In case of the possibility of heat transmission, take some countermeasure like taking the joints off from the pipe, etc.
- 6) When installation to the outdoor pipes, make lagging to the joints to prevent the joints body aging.

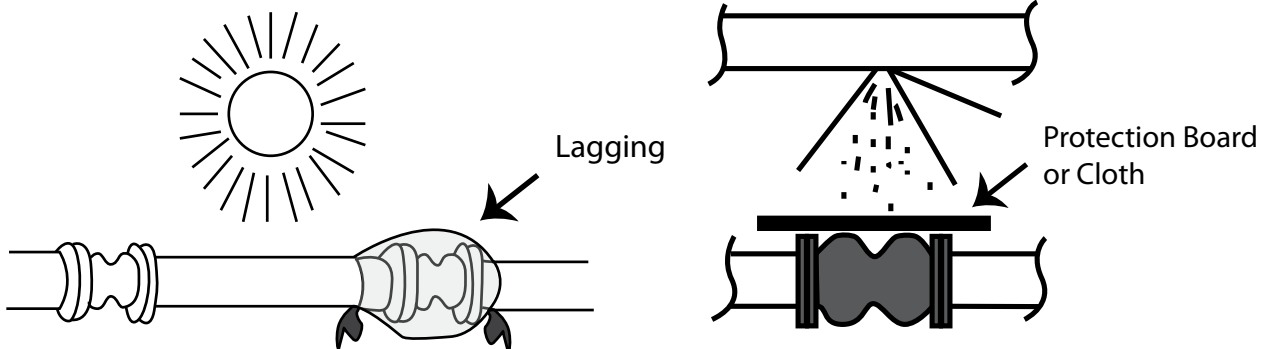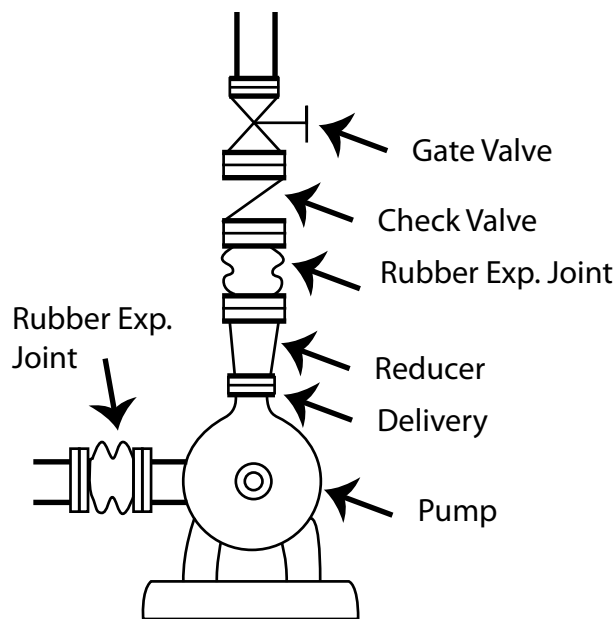

INSTALLATION OF RUBBER EXPANSION JOINTS

DKK-10 Pump Outlet (Vibration Absorbtion)

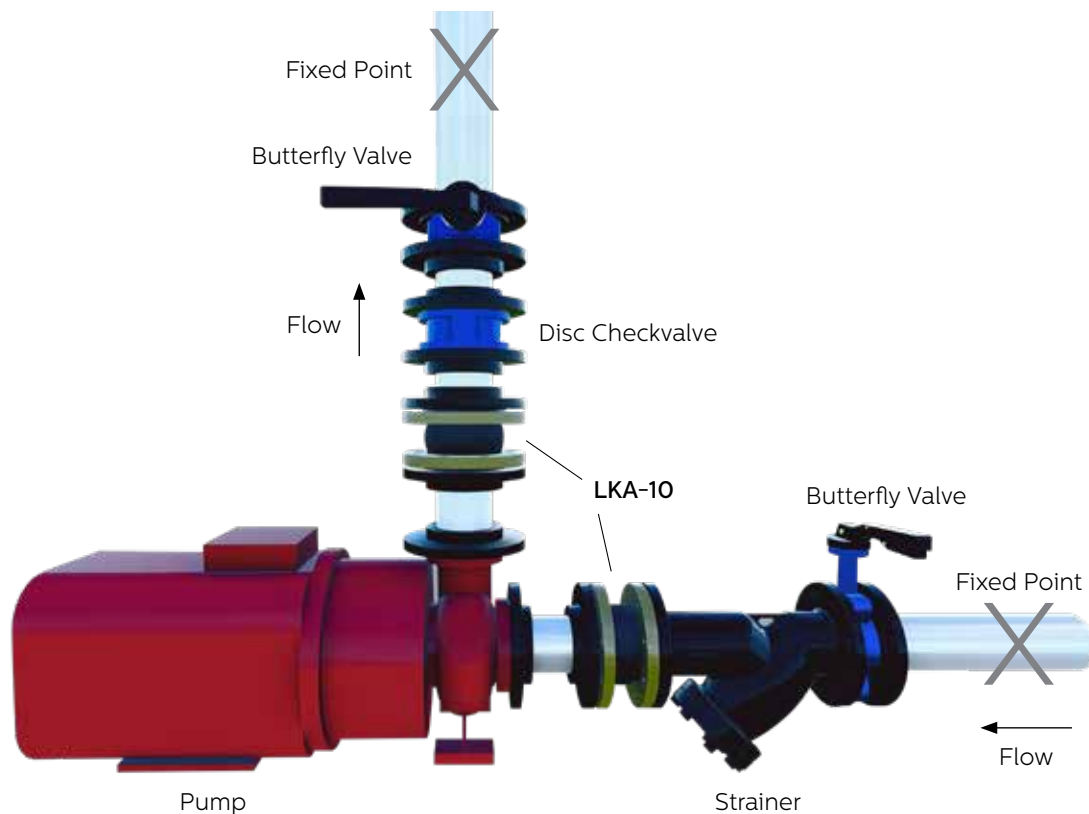

DKK-10 Pump Outlet (Vibration Absorbtion)

